

GN06-A1

Product Specifications

Issue 1.1 Date 2023-06-27



Copyright © Neoway Technology Co., Ltd 2023. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Neoway Technology Co., Ltd.

neoway 有方 is the trademark of Neoway Technology Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

This document provides guide for users to use GN06-A1.

This document is intended for system engineers (SEs), development engineers, and test engineers.

THIS GUIDE PROVIDES INSTRUCTIONS FOR CUSTOMERS TO DESIGN THEIR APPLICATIONS. PLEASE FOLLOW THE RULES AND PARAMETERS IN THIS GUIDE TO DESIGN AND COMMISSION. NEOWAY WILL NOT TAKE ANY RESPONSIBILITY OF BODILY HURT OR ASSET LOSS CAUSED BY IMPROPER OPERATIONS.

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE DUE TO PRODUCT VERSION UPDATE OR OTHER REASONS.

EVERY EFFORT HAS BEEN MADE IN PREPARATION OF THIS DOCUMENT TO ENSURE ACCURACY OF THE CONTENTS, BUT ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS DOCUMENT DO NOT CONSTITUTE A WARRANTY OF ANY KIND, EXPRESS OR IMPLIED.

Neoway provides customers complete technical support. If you have any question, please contact your account manager or email to the following email addresses:

Sales@neoway.com

Support@neoway.com

Website: <http://www.neoway.com>

Contents

1 System Overview	8
1.1 Overview	8
1.2 Features	8
1.3 Module photo	9
1.4 Block diagram	9
1.5 Specifications	10
2 Pin Description	12
2.1 Pin assignment.....	12
2.2 Detailed pin descriptions	13
3 Electrical Characteristics	14
3.1 Absolute Maximum Rating	14
3.2 IO Characteristics.....	14
3.2.1 PRRSTX and PRTRG	14
3.2.2 Others	15
3.3 DC Characteristics	15
3.3.1 Operating Conditions.....	15
3.3.2 Power Consumption	16
4 Hardware Description	17
4.1 Connecting power	17
4.2 Antenna design	17
4.3 Reset and mode control	17
5 Default Serial Interfaces	19
6 Mechanical Specification	20
7 Reference Design.....	21
7.1 Minimal design	21
7.2 PCB Footprint Reference	22
7.3 Layout Notes	22
8 Software Interface	23
8.1 NMEA Message Format.....	23
8.1.1 GGA - Global Positioning System Fix Data	23
8.1.2 GLL - Geographic Position - Latitude/Longitude	24
8.1.3 GSA - GNSS DOP and Active Satellites.....	25
8.1.4 GSV - GNSS Satellites in View	25
8.1.5 RMC - Recommended Minimum Specific GNSS Data	26
8.1.6 VTG - Course over Ground and Ground Speed.....	27
8.1.7 ZDA - Time & Date.....	28
8.1.8 GST - GNSS Pseudorange Error Statistics.....	28
8.1.9 TXT - ANT & USR message	29

8.2 Exclusive Binary Message	29
8.3 Mode Configuration	30
8.3.1 CFG-SIMPLERST	30
9 Product Packaging and Handling	31
9.1 Packaging.....	31
9.1.1 Packaging Notes	31
9.1.2 Tape and Reel	31
9.1.3 Shipment Packaging	32
9.2 Storage.....	33
9.3 ESD Handling.....	33
9.3.1 ESD Handling Precautions	33
9.3.2 ESD protection measures	34
9.3.3 Moisture sensitivity level.....	34
10 Labeling and Ordering Information	35
10.1 Labeling.....	35
10.2 Ordering info	35
11 Related Documents	36

Table of Figures

Figure 1-1 GN06-A1 module	9
Figure 1-2 Block diagram	9
Figure 2-1 Pin assignment (top view)	12
Figure 4-1 Timing of mode entry with host controller	18
Figure 6-1 Dimensions	20
Figure 7-1 Minimal application diagram	21
Figure 7-2 PCB Footprint Reference	22
Figure 9-1 Tape dimensions	32
Figure 9-2 Reel dimensions	32
Figure 9-3 Packaging	33
Figure 10-1 Labeling content	35

Table of Tables

Table 1-1 GN06-A1	8
Table 1-2 Specifications	10
Table 1-3 Time To First Fix (TTFF)	11
Table 2-1 Detailed pin descriptions	13
Table 3-1 Absolute rating	14
Table 3-2 PRRSTX and PRTRG	14
Table 3-3 Others	15
Table 3-4 Operating conditions	15
Table 3-5 Power consumption	16
Table 5-1 Default messages	19
Table 6-1 Dimensions	20
Table 8-1 NMEA output message	23
Table 8-2 GGA Data Format	23
Table 8-3 Position Fix Indicators	24
Table 8-4 GLL Data Format	24
Table 8-5 GSA Data Format	25
Table 8-6 Mode 1	25
Table 8-7 Mode 2	25
Table 8-8 GSV Data Format	26
Table 8-9 RMC Data Format	27
Table 8-10 VTG Data Format	27
Table 8-11 ZDA Data Format	28
Table 8-12 GST Data Format	28
Table 8-13 TXT Data Format	29
Table 8-14 Antenna status NMEA output	29
Table 8-15 Commands exclusive to GN06-A1	29
Table 9-1 Packing hierarchy	31
Table 10-1 Ordering codes	35

About This Document

Scope

This document is applicable to GN06-A1

Audience

This document is intended for [system engineers \(SEs\)](#), [development engineers](#), and [test engineers](#).

Change History

Issue	Date	Change	Changed By
1.0	2022-09	Initial draft	Xue Gang1
1.1	2023-06	Modify the minimum backup supply voltage Optimize the GNSS system modes supported Update the package specifications	Berry

Conventions

Symbol	Indication
	This warning symbol means danger. You are in a situation that could cause fatal device damage or even bodily damage.
	Means reader be careful. In this situation, you might perform an action that could result in module or product damages.
	Means note or tips for readers to use the module

1 System Overview

1.1 Overview

GN06-A1 is a cost-effective low power GNSS positioning module based on HD812X GNSS chip. It supports GPS/QZSS, BDS, GLONASS, and SBAS. The module features SAW, LNA, flash memory as well as an antenna supervisor in a compact form factor.

GN06-A1 is a versatile receiver that can be used with active and passive antennas, making it an excellent choice for a wide range of applications such as tracking, telematics and navigation. The fast start-up in combined with the lower power consumption and the very low backup current make the GN06-A1 particularly suitable for use in battery-powered devices, e.g., for asset tracking.

1.2 Features

- Versatile GNSS module supporting GPS/QZSS, BDS, GLONASS, and SBAS
- Low current consumption of only 16 mA for GPS/QZSS
- Backup current of only 15 μ A
- Active and passive antennas supported thanks to built-in SAW and LNA
- Supports A-GNSS service for minimal startup times
- Pin-compatible with previous generation and many mainstream GNSS modules

Table 1-1 GN06-A1

Product	GNSS							Feature					Interface			Accuracy			Grade			
	GNSS system mode	Band (S/D/T)	GPS/QZSS	BDS	GLONASS	Galileo	NavIC	SBAS	Built-in LNA	Programmable (flash)	Data logging	D-GNSS	Oscillator	UART	I2C	USB	SPI	Meter	Sub-meter	Centimeter	Industrial	Automotive
GN06-A1-1010A00E	01	S	●		●			●	●	●	●	●	T	●				●			●	
	02	S	●	●				●	●	●	●	●	T	●				●			●	

T = TCXO


1.3 Module photo

Figure 1-1 GN06-A1 module



1.4 Block diagram

Figure 1-2 Block diagram

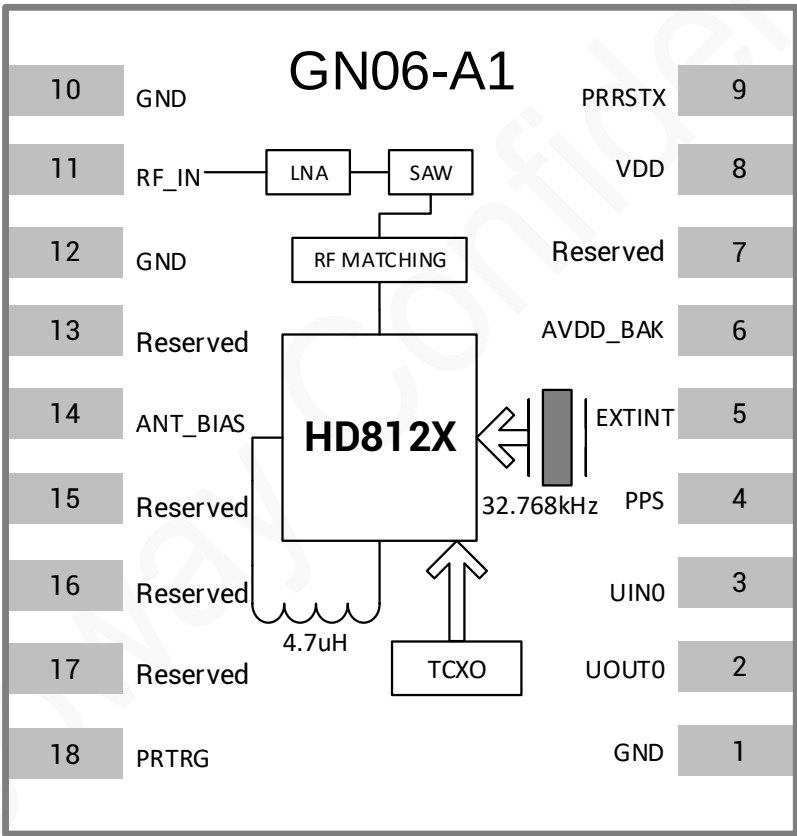

1.5 Specifications

Table 1-2 Specifications

Parameter	Specification	
GNSS channels	88 in total	
GNSS reception	GPS/QZSS: L1C/A	
	GLONASS: G1	
	BDS: B1I	
	SBAS: L1 (SDCM, WAAS, EGNOS, GAGAN and MSAS)	
Updating rate	5 Hz maximum	
Position accuracy ^[1]	GNSS	1.5m CEP
	GNSS (with SBAS)	< 1.0m CEP
Velocity & Time accuracy	GNSS	0.1 m/s CEP
	PPS_1 σ	20 ns
Sensitivity ^[2]	Cold start	-148 dBm
	Hot start	-156 dBm
	Reacquisition	-158 dBm
	Tracking	-163 dBm
Operating condition	Main voltage	2.0-3.63 V
	Digital I/O voltage	2.0-3.63 V
	Backup voltage	1.8-3.63 V
	Tracking	GPS/QZSS+GLONASS+SBAS 20 mA @ 3.3V
		GPS/QZSS+BDS+SBAS 17 mA @ 3.3V
		GPS/QZSS 16 mA @ 3.3V
	Acquisition	GPS/QZSS+GLONASS+SBAS 21 mA @ 3.3V
		GPS/QZSS+BDS+SBAS 17 mA @ 3.3V
		GPS/QZSS 16 mA @ 3.3V
	Standby mode	15 uA @ 3.3V
Serial interface	UART	1
Protocol	NMEA 0183 Protocol Ver.3.01/4.00/4.10 (Default) Cynosure GNSS Receiver Protocol	
Operating limit	Velocity	515 m/s
	Altitude	18,000m
Antenna supervision	Antenna short circuit protection and open circuit detection	
Operating temperature	-40°C to +85°C	

Storage temperature	-40°C to +85°C
Package	10.1x9.7x2.5 mm 18-pin LCC
Certification	RoHS, REACH, FCC, CE-RED

- [1] Open sky condition.
- [2] Demonstrated with a good external LNA

Table 1-3 Time To First Fix (TTFF)

Parameter	GPS/QZSS+GLONASS+SBAS	GPS/QZSS+ BDS+SBAS	GPS/QZSS
Hot start	2s	2s	1s
Cold start	28s	28s	28s

2 Pin Description

2.1 Pin assignment

Figure 2-1 Pin assignment (top view)

10	GND	PRRSTX	9
11	RF_IN	VDD	8
12	GND	Reserved	7
13	Reserved	AVDD_BAK	6
14	ANT_BIAS	EXTINT	5
15	Reserved	PPS	4
16	Reserved	UINO	3
17	Reserved	UOUT0	2
18	PRTRG	GND	1*

**GN06-A1
Top View**

- Pin 1 aligns to the circular hole on module cover.

2.2 Detailed pin descriptions

Table 2-1 Detailed pin descriptions

Function	Symbol	No.	I/O	Description
Power	VDD	8	Power	Main power supply voltage input.
	GND	1, 10, 12	VSS	Assure a good GND connection to all GND pins of the module, preferably with a large ground plane.
	AVDD_BAK	6	Power	Backup power supply voltage input. Backup power is needed in order to enable warm and hot start features.
Antenna	RF_IN	11	I	RF signal input. Use a controlled impedance of 50Ω for the routing from RF_IN pin to the antenna or the antenna connector.
	ANT_BIAS	14	O	Antenna bias voltage output. The ANT_BIAS pin can be used to power an external active antenna, and the current should be no more than 25 mA.
UART	UOUT0	2	O	UART0 serial data output.
	UIN0	3	I	UART0 serial data input.
Other	PRTRG	18	I	Mode selection, or the trigger input in deep sleep mode to wake up the system.
	PRRSTX	9	I	External reset, low active
	PPS	4	O	Setting for time pulse output (PPS). Leave it floating if not used.
	EXTINT	5	I	A trigger pin to external interrupt. Leave it floating if not used.
	NC	7, 13, 15, 16, 17	--	Reserved. Leave it floating if not used.

3 Electrical Characteristics

3.1 Absolute Maximum Rating

Table 3-1 Absolute rating

Symbol	Parameter	Min.	Max.	Unit
VDD	Power input for the main power domain	-0.5	3.63	V
AVDD_BAK	Power input for the backup power domain	-0.5	3.63	V
V _I max	Digital I/O pin input voltage	-0.5	3.6	V
T _{storage}	Storage temperature	-40	85	°C
T _{solder}	Solder reflow temperature	--	260	°C
VESD (HBM)	Maximum tolerable ESD level	--	2000	V

3.2 IO Characteristics

3.2.1 PRRSTX and PRTRG

Table 3-2 PRRSTX and PRTRG

Symbol	Parameter	Condition	Min.	Typ.	Max.	Unit
I _{IZ}	Input leakage current	--	--	--	+/-1	uA
V _{IH}	Input high voltage	--	AVDD_BAK*0.67	--	AVDD_BAK	V
V _{IL}	Input low voltage	--	0	--	AVDD_BAK*0.27	V
V _{OH}	Output high voltage	I _{OH} = 5.3 mA, AVDD_BAK = 3.3V	2.64	--	--	V
		I _{OH} = 1.2 mA, AVDD_BAK = 1.8V	1.53	--	--	V
V _{OL}	Output low voltage	I _{OL} = 3.9 mA, AVDD_BAK = 3.3V	--	--	0.4	V
		I _{OL} = 1.9 mA, AVDD_BAK = 1.8V	--	--	0.45	V
C _i	Input capacitance	--	--	--	11	pF
R _{PU}	Pull-up resistance	--	35	--	84	kΩ

3.2.2 Others

Table 3-3 Others

Symbol	Parameter	Condition	Min.	Typ.	Max.	Unit
I _{IZ}	Input leakage current	--	--	--	+/-1	uA
V _{IH}	Input high voltage	--	VDD*0.67	--	VDD	V
V _{IL}	Input low voltage	--	0	--	VDD*0.27	V
V _{OH}	Output high voltage	I _{OH} = 5.3 mA, VDD = 3.3V	2.64	--	--	V
V _{OL}	Output low voltage	I _{OL} = 3.9 mA, VDD = 3.3V	--	--	0.4	V
C _i	Input capacitance	--	--	--	11	pF
R _{PU}	Pull-up resistance	-	35	--	84	kΩ

3.3 DC Characteristics

3.3.1 Operating Conditions

Table 3-4 Operating conditions

Symbol	Parameter	Min.	Typ.	Max.	Unit
VDD	Power supply voltage	3.0	3.3	3.6	V
AVDD_BAK	Backup battery voltage	1.8	3.3	3.6	V
ICC _{max}	Maximum operating current @ VDD	--	--	200	mA
T _{env}	Operating temperature	-40	--	85	°C
V _{ANT_BIAS}	Antenna bias voltage	--	VDD-0.15 ^[1]	--	V

- [1] Condition: tested at high, low, and room temperature, with 0.1V deviation.

3.3.2 Power Consumption

Table 3-5 Power consumption

Parameter	Measure Pin	Typ.	Unit
Tracking	GPS/QZSS+GLONASS+SBAS	20	mA
	GPS/QZSS+BDS+SBAS	17	
	GPS/QZSS	16	
Acquisition	GPS/QZSS+GLONASS+SBAS	21	
	GPS/QZSS+BDS+SBAS	17	
	GPS/QZSS	16	
Standby mode	AVDD_BAK ^[2]	15	uA

- [1] Condition: VDD = 3.3V @ Room Temperature; All Pins Open.
- [2] Condition: AVDD_BAK = 3.3V @ Room Temperature; All Pins Open.

4 Hardware Description

4.1 Connecting power

In order to ensure the positioning performance, please control the ripple of the module power supply. It is recommended to use the LDO with max output current above 100 mA.

If the power for VDD pin is off, the real-time clock (RTC) and battery backed RAM (BBR) are supplied through the AVDD_BAK pin. Thus, orbit information and time can be maintained and will allow a Hot or Warm start. If the AVDD_BAK needs to be supplied separately, please make sure the voltage is greater than or equal to the main voltage.

Note: If no backup supply is available, connect the AVDD_BAK pin to the main power supply. Floating state is not recommended.

4.2 Antenna design

There is a built-in LNA and SAW in the GNSS module. It is recommended to use either a passive or an active antenna with gain less than 30 dB.

The module has built-in short circuit protection and open circuit detection functions, which can detect the antenna status of normal connection, open circuit, and short circuit, and send out the status prompt message in NMEA data.

- Short circuit protection

The module includes internal short circuit antenna detection. Once an overcurrent is detected at the ANT_BIAS port, the module will cut off this power supply automatically to prevent permanent damages.

- Open circuit detection

The module can detect an open circuit in the antenna. Users can judge it from antenna status messages.


4.3 Reset and mode control

The operation mode of GNSS module is controlled by PRRSTX (nRESET) and PRTRG (BOOT) pin. PRTRG pin cannot work alone when the module operates normally. PRRSTX pin can reset the system. Users **MUST** retain PRTRG and PRRSTX pins in the design to ensure that the Boot mode is accessible in case that there is no firmware written in the embedded chip.

- Keep PRTRG pin floating during system power-up or the external reset (PRRSTX from low to high), and the module will enter **User Normal Mode**.

- When the module powers up or PRRSTX from low to high, the module will execute an **external reset**. (If the power for AVDD_BAK is always on, the external reset will not affect the ephemeris data in the backup domain)
- Drive PRTRG pin to low or connect PRTRG to GND directly (not by pull-down resistance) during system power-up or the external reset (PRRSTX from low to high), and the system enters **BootROM Command Mode** at PRTRG pin being released from low to floating state, and ready for firmware upgrading command.
- When connecting PRRSTX and PRTRG to any host IO, DO NOT use the pull-up or pull-down resistance.

Figure 4-1 Timing of mode entry with host controller

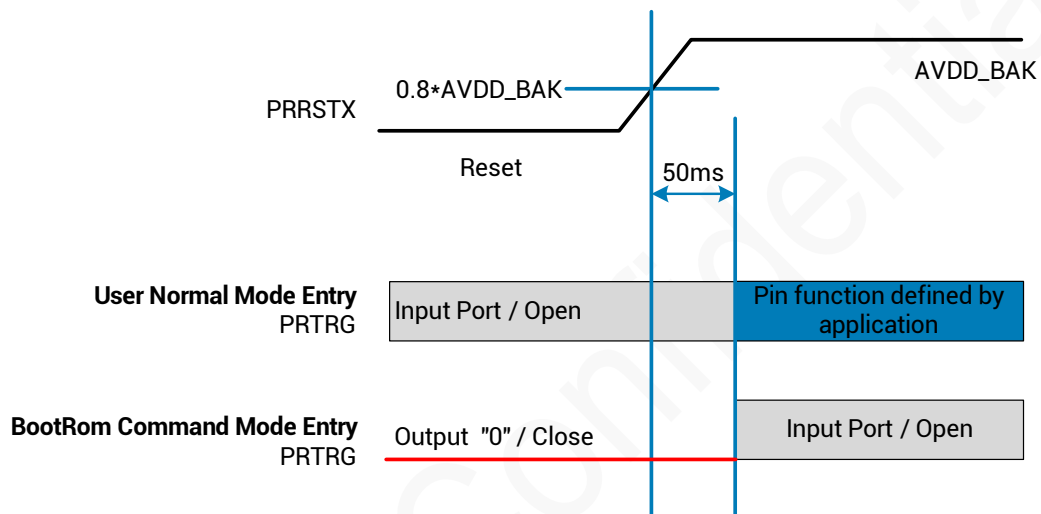

5 Default Message

Table 5-1 Default messages

Interface	Settings
UART output	9600 baud, 8 data bits, no parity bit, 1 stop bit. Configured to transmit both NMEA and HD Binary protocols, but only the following NMEA (and no HD Binary sentence) messages have been activated at start-up: GGA, GSA, GSV, RMC, ZDA, TXT-ANT
UART input	9600 baud, 8 data bits, no parity bit, 1 stop bit, autobauding disabled. Automatically accepts following protocols without need of explicit configuration: HD binary sentence, NMEA The GNSS receiver supports interleaved HD Binary and NMEA messages.
Timepulse (1 Hz Nav)	1 pulse per second, synchronized at rising edge, pulse length 100 ms.

- Refer to GNSS_Protocol_Specification for information about other settings.

When the module is applied to the specific application, users can shut off the main power in order to further reduce the power consumption. To avoid the high level in serial interface influencing the normal operation, it is highly suggested to cut off the serial port when shut off the main power. Otherwise, please set the serial port to input mode or high impedance state with pull-down resistor.

6 Mechanical Specification

Figure 6-1 Dimensions

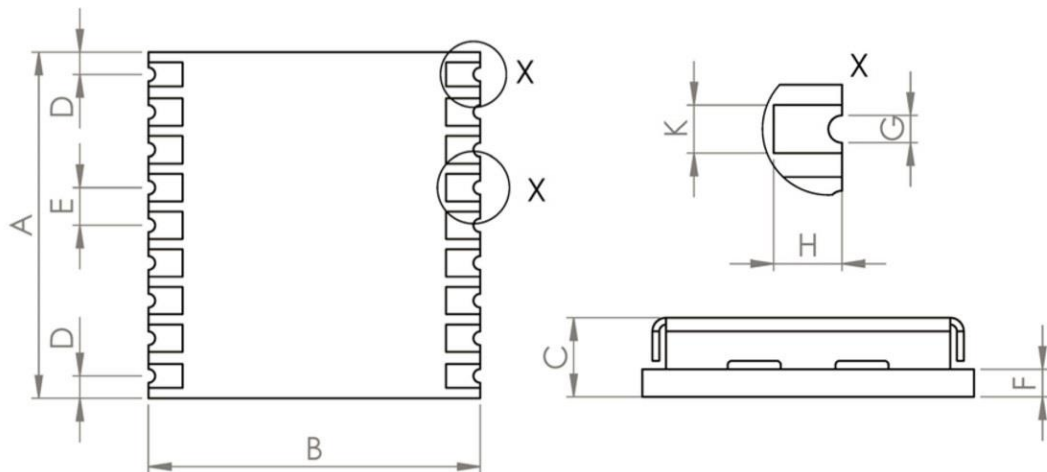


Table 6-1 Dimensions

Symbol	Min.(mm)	Typ.(mm)	Max.(mm)
A	9.9	10.1	10.3
B	9.5	9.7	9.9
C	2.3	2.5	2.7
D	0.55	0.65	0.95
E	1.0	1.1	1.2
F	0.6	0.8	--
G	0.4	0.5	0.6
H	0.8	0.9	1.0
K	0.7	0.8	0.9


7 Reference Design

7.1 Minimal design

The minimal design of GN06-A1 shows as below. The 82 nH inductor is used only when an active antenna is connected, and no need with a passive antenna. The characteristic impedance from RF_IN pin to the antenna connector should be 50Ω.


Note: Do not keep the AVDD_BAK pin open. There is no diode between AVDD_BAK and VDD inside the module. The AVDD_BAK can be powered by VDD through an external diode, or an external independent power supply.

Figure 7-1 Minimal application diagram

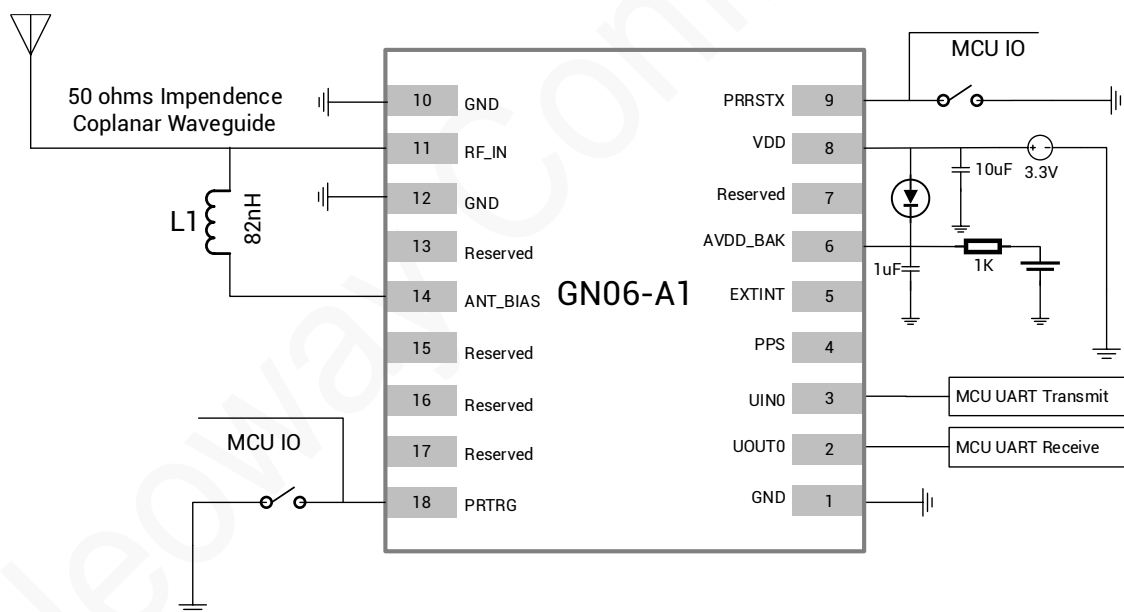

7.2 PCB Footprint Reference

Figure 7-2 PCB Footprint Reference

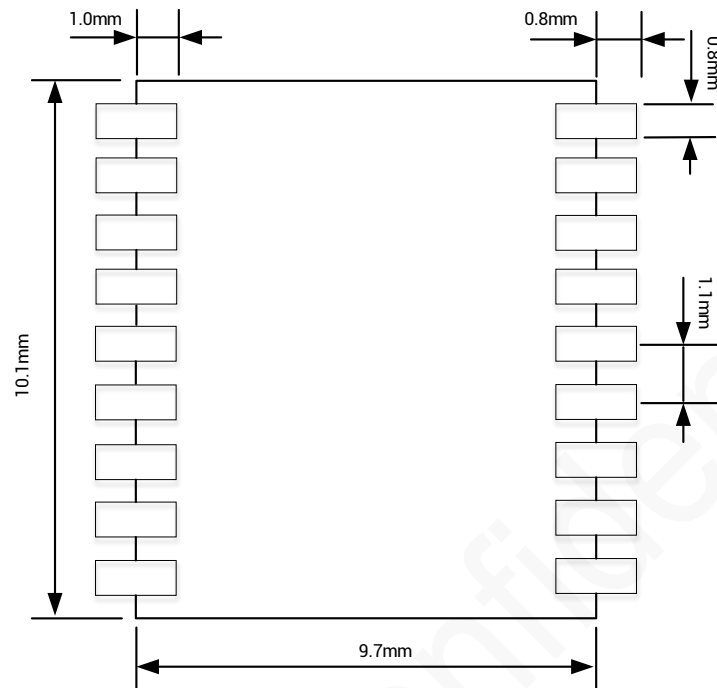

7.3 Layout Notes

- A decoupling capacitor should be placed close to VDD pin of the module, and the width of power routing should be more than 0.5 mm.
- The width of RF routing between RF port to antenna interface should be wider than 0.2 mm. The characteristic impedance of RF routing between RF port to antenna interface should be controlled to 50Ω.
- It is recommended that the routing from RF port to antenna interface refers to the second layer, and no routing are recommended on the layer.
- Do not place the module close to any EMI source, like antenna, RF routing, DC/DC or power conductor, clock signal or other high-frequency switching signal, etc.

8 Software Interface

8.1 NMEA Message Format

Table 8-1 NMEA output message

NMEA	Sub ID	Description
GGA	0x00	Global positioning system fixed data
GLL	0x01	Geographic position - latitude/longitude
GRS	0x02	GNSS range residuals
GSA	0x03	GNSS Overall satellite data
GSV	0x04	GNSS Detailed satellite data
RMC	0x05	Recommended minimal data for GNSS
VTG	0x06	Course over ground and ground speed
ZDA	0x07	Date and time
GST	0x08	GNSS Pseudorange Error Statistics
TXT	0x20	Antenna status

- The default output of module is GGA, GSA, GSV, RMC, ZDA, and TXT.

8.1.1 GGA - Global Positioning System Fix Data

Output example of Table 8-2 as below:

\$GNGGA,074144.000,3957.79941,N,11619.02981,E,1,19,0.83,105.5,M,-8.4,M,,*65

Table 8-2 GGA Data Format

Name	Example	Unit	Description
Message ID	\$GNGGA		GGA protocol header
UTC Time	074144.000		hhmmss.sss
Latitude	3957.79941		ddmm.mmmmm
N/S indicator	N		N=north or S=south
Longitude	11619.02981		dddmm.mmmmm
E/W Indicator	E		E=east or W=west
Position Fix Indicator	1		See Table 8-3
Satellites Used	19		Number of satellites in use, 00-24

HDOP	0.83		Horizontal Dilution of Precision (meters)
MSL Altitude	105.5	meters	Antenna Altitude above/below mean-sea-level (geoid) (in meters)
Units	M	meters	Units of antenna altitude, meters
Geoidal Separation	-8.4	meters	
Units	M	meters	Units of geoidal separation, meters
Age of diff. GNSS data		second	Null fields when DGPS is not used
Diff. Ref. Station ID			Differential reference station ID, 0000-1023
Checksum	*65		Checksum
<CR> <LF>			End of message termination

Table 8-3 Position Fix Indicators

Value	Description
0	Fix not available
1	GNSS fix
2	Differential GNSS fix

8.1.2 GLL - Geographic Position - Latitude/Longitude

Output example of Table 8-4 as below:

```
$GNGLL,2503.71465,N,12138.73922,E,062052.000,A,A*45
```

Table 8-4 GLL Data Format

Name	Example	Unit	Description
Message ID	\$GNGLL		GLL protocol header
Latitude	2503.71465	ddmm.mmmmm	
N/S indicator	N	N=north or S=south	
Longitude	12138.73922	dddmm.mmmmm	
E/W indicator	E	E=east or W=west	
UTC Time	062052.000	hhmmss.sss	
Status	A	A=data valid or V=data not valid	
Mode	A	A=Autonomous, D=DGPS, N=Data not valid,	
Checksum	*45		
<CR> <LF>			End of message termination

8.1.3 GSA - GNSS DOP and Active Satellites

Output example of Table 8-5 as below:

```
$GPGSA,A,3,01,11,18,30,28,07,17,22,03,,,,,1.10,0.79,0.77,1*12
```

```
$BDGSA,A,3,10,07,08,12,03,13,01,11,02,04,05,,1.10,0.79,0.77,4*0B
```

Table 8-5 GSA Data Format

Name	Example	Unit	Description
Message ID	\$GPGSA		GSA protocol header
Mode 1	A		See Table 8-6
Mode 2	3		See Table 8-7
ID of satellite used	01		Sv on Channel 1
ID of satellite used	11		Sv on Channel 2
....			
ID of satellite used			Sv on Channel 12
PDOP	1.10		Position Dilution of Precision
HDOP	0.79		Horizontal Dilution of Precision
VDOP	0.77		Vertical Dilution of Precision
System ID	1		Satellites used in GPS
Checksum	*12		
<CR> <LF>			End of message termination

Table 8-6 Mode 1

Value	Description
M	Manual-forced to operate in 2D or 3D mode
A	Automatic-allowed to automatically switch 2D/3D

Table 8-7 Mode 2

Value	Description
1	Fix not available
2	2D
3	3D

8.1.4 GSV - GNSS Satellites in View

Output example of Table 8-8 as below:

\$GPGSV,4,1,15,193,69,35,39,6,50,28,41,137,50,134,34,129,50,134,34*73

\$GPGSV,4,2,15,17,45,137,41,2,42,326,40,5,42,250,40,128,38,243,36*4B

\$GPGSV,4,3,15,9,36,65,42,12,26,285,35,127,12,260,32,19,9,137,35*7D

\$GPGSV,4,4,15,23,8,41,35,25,4,316,36,28,,,*4F

\$BDGSV,3,1,09,8,75,64,39,6,73,237,38,3,58,205,38,1,53,143,38*56

\$BDGSV,3,2,09,9,47,224,38,4,38,118,37,2,35,246,33,5,16,259,31*6C

\$BDGSV,3,3,09,10,2,210,21*62

Table 8-8 GSV Data Format

Name	Example	Unit	Description
Message ID	\$GPGSV		GSV protocol header
Total number of messages ^[1]	4		Range 1 to 6, Total number of GSV messages to be transmitted in this group
Message number ^[1]	1		Range 1 to 6 Origin number of this GSV message within current group
Satellites in view	15		Total number of satellites in view
Satellite ID ^[2]	193		Satellite PRN number
Elevation	69	degrees	Elevation in degrees (Range 00 to 90)
Azimuth	35	degrees	Azimuth in degrees to true north (Range 000 to 359)
SNR (C/No)	39	dB-Hz	SNR in dB (Range 00 to 99, null when not tracking)
...			
Satellite ID	129		Satellite PRN number (Range 01 to 196)
Elevation	50	degrees	Elevation in degrees (Range 00 to 90)
Azimuth	134	degrees	Azimuth in degrees to true north (Range 000 to 359)
SNR (C/No)	34	dB-Hz	SNR in dB Channel 4 (Range 00 to 99, null when not tracking)
Checksum	*73		
<CR> <LF>			End of message termination

- [1]: Depending on the number of satellites tracked, multiple messages of GSV data may be required.
- [2]: GPS ID: 01~32, SBAS ID: 127~141, QZSS ID: 193~199, BeiDou ID: 01~32

8.1.5 RMC - Recommended Minimum Specific GNSS Data

Output example of Table 8-9 as below:

\$GNRMC,075939.000,A,2225.56166,N,11412.68199,E,0.000,64.79,020589,0.0,E,A*1D

\$GNRMC,074458.000,A,3957.79932,N,11619.03010,E,0.005,0.00,280419,,,A*4B

Table 8-9 RMC Data Format

Name	Example	Unit	Description
Message ID	\$GNRMC		RMC protocol header
UTC Time	075939.000		hhmmss.sss
Status	A		A=data valid or V=data not valid
Latitude	2225.56166		ddmm.mmmmm
N/S Indicator	N		N=north or S=south
Longitude	11412.68199		dddmm.mmmmm
E/W Indicator	E		E=east or W=west
Speed over ground	0.000	knots	Speed over ground
Course over ground	64.79	degrees	Degrees to true north
Date	020589		ddmmyy
Magnetic variation	0.0	degrees	(Not shown)
Variation sense	E		E=east or W=west (Not shown)
Mode	A		A=Autonomous, D=DGPS, N=Data not valid,
Checksum	*4B		
<CR> <LF>			End of message termination

8.1.6 VTG - Course over Ground and Ground Speed

Output example of Table 8-10 as below:

```
$GNVTG,0.00,T,0.00,M,0.000,N,0.000,K,A*3D
```

```
$GNVTG,0.00,T,,M,0.011,N,0.021,K,A*20
```

Table 8-10 VTG Data Format

Name	Example	Unit	Description
Message ID	\$GNVTG		VTG protocol header
Course over ground	0.00	degrees	Degrees to true north
Reference	T		True north
Course over ground		degrees	Degrees to Magnetic
Reference	M		Magnetic
Speed over ground	0.000	knots	Measured speed
Units	N		Knots
Speed over ground	0.000	km/hr	Measured speed
Units	K		Kilometer per hour
Mode	A		A=Autonomous, D=DGPS, N=Data not valid,
Checksum	*3D		
<CR> <LF>			End of message termination

8.1.7 ZDA - Time & Date

Output example of Table 8-11 as below:

\$GNZDA,033900.000,28,10,2015,,*4C

Table 8-11 ZDA Data Format

Name	Example	Unit	Description
Message ID	\$GNZDA		ZDA protocol header
UTC Time	033900.000		hhmmss.sss
Day	28		dd (01 to 31)
Month	10		mm (01 to 12)
Year	2015		yyyy (1980 to 2025)
Local zone hours		hour	
Local zone minutes		minute	
Checksum	*4C		
<CR> <LF>			End of message termination

8.1.8 GST - GNSS Pseudorange Error Statistics

Output example of Table 8-12 as below:

\$GNGST,081119.000,1.2,,,,,0.6,0.5,0.5*52

Table 8-12 GST Data Format

Name	Example	Unit	Description
Message ID	\$GNGST		GST protocol header
UTC Time	081119.000		hhmmss.sss
RMS value	1.2		RMS value of the standard deviation of the range inputs to the navigation process. Range inputs include pseudoranges & DGNSS corrections
Standard semi-major axis of error		Meter	Standard deviation of semi-major axis of error ellipse
Standard semi-minor axis of error		Meter	Standard deviation of semi-minor axis of error ellipse
Orientation of semi-major axis of error		Degree	Orientation of semi-major axis of error ellipse (degrees from true north)
latitude error	0.6	Meter	Standard deviation of latitude error
longitude error	0.5	Meter	Standard deviation of longitude error
altitude error	0.5	Meter	Standard deviation of altitude error
Checksum	*52		

8.1.9 TXT - ANT & USR message

Output example of Table 8-13 as below:

\$GNTXT,01,01,01,ANT_OK*50

Table 8-13 TXT Data Format

Name	Example	Unit	Description
Message ID	\$GNTXT		USR message protocol header
Total number	01		Total number of sentences
Sentence Number	01		Sentence number
Identifier	01		Text identifier
Content	ANT_OK		Text message
Checksum	*50	4C	
<CR> <LF>			End of message termination

Table 8-14 Antenna status NMEA output

Active antenna status	GNSS module output
Short circuit	\$GNTXT,01,01,01,ANT_SHORT*06
Normal operating	\$GNTXT,01,01,01,ANT_OK*50
Open circuit	\$GNTXT,01,01,01,ANT_OPEN*40

8.2 Exclusive Binary Message

The common exclusive commands show as below:

Table 8-15 Commands exclusive to GN06-A1

Command description	Software[command][2]
Perform a Cold start	F1 D9 06 40 01 00 01 48 22
Perform a Warm start	F1 D9 06 40 01 00 02 49 23
Perform a Hot start	F1 D9 06 40 01 00 03 4A 24
Perform a Factory reset	F1 D9 06 09 08 00 02 00 00 00 FF FF FF FF 15 01
UART configures as 115200bps	F1 D9 06 00 08 00 00 00 00 00 00 C2 01 00 D1 E0
UART configures as 9600bps	F1 D9 06 00 08 00 00 00 00 00 80 25 00 00 B3 07
Enable ZDA message	F1 D9 06 01 03 00 F0 07 01 02 1E
Disable ZDA message	F1 D9 06 01 03 00 F0 07 00 01 1D
Navigate with GPS only	F1 D9 06 0C 04 00 01 00 00 00 17 A0
Navigate with BeiDou system only	F1 D9 06 0C 04 00 04 00 00 00 1A AC
Navigate with GPS+ BeiDou system	F1 D9 06 0C 04 00 05 00 00 00 1B B0

Query firmware version^[1]

F1 D9 0A 04 00 00 0E 34

- [1] Firmware version will show as Hex mode too.
- [2] Add 0D 0A at the end of command.

8.3 Mode Configuration

8.3.1 CFG-SIMPLERST

Configure soft reset (as system command, there is NO ACK);

F1 D9 06 40 01 00 00 47 21

Configure a cold start (as system command, there is NO ACK);

F1 D9 06 40 01 00 01 48 22

Configure a warm start (as system command, there is NO ACK);

F1 D9 06 40 01 00 02 49 23

Configure a hot start (as system command, there is NO ACK);

F1 D9 06 40 01 00 03 4A 24

Configure GNSS stop (if successful, it would return ACK, else return NAK);

F1 D9 06 40 01 00 10 57 31

Configure GNSS start (if successful, it would return ACK, else return NAK);

F1 D9 06 40 01 00 11 58 32

Configure Clear All TRK Channels (if successful, it would return ACK, else return NAK);

F1 D9 06 40 01 00 80 C7 A1

CFG-SLEEP

Set GNSS task to deep sleep for 5000ms;

F1 D9 06 41 05 00 88 13 00 00 01 E8 56

CFG-PWRCTL

Poll message of power control;

F1 D9 06 42 00 00 13 3F

Set receiver into cyclic sleep mode;

F1 D9 06 42 14 00 00 05 00 00 B8 0B 00 00 60 EA 00 00 D0 07 00 00 00 00 00 00 45 F9

9 Product Packaging and Handling

9.1 Packaging

9.1.1 Packaging Notes

GN06-A1 GNSS module is a Moisture Sensitive Device (MSD) and Electrostatic Sensitive Device (ESD). During the packing and shipping, it is strictly required to take appropriate MSD handling instructions and precautions. The table below shows the general packing hierarchy for the standard shipment.


Table 9-1 Packing hierarchy

Module	Reel	Sealed bag	Packing box	Shipping carton
				

9.1.2 Tape and Reel


GN06-A1 modules are delivered as hermetically sealed, reeled tapes in order to enable efficient production, production lot set-up and tear-down. The figure below shows the tape dimensions.

Figure 9-1 Tape dimensions

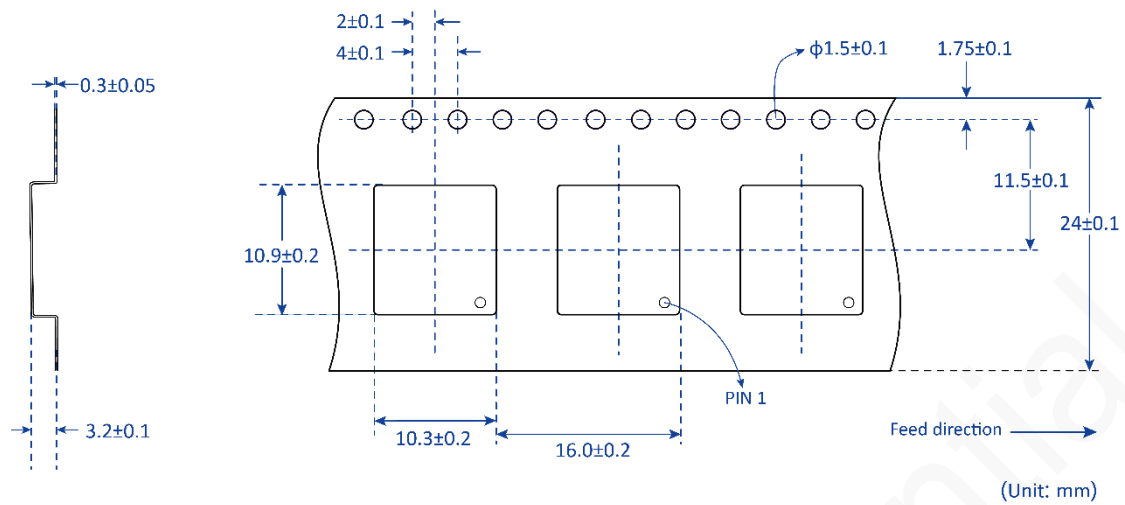

GN06-A1 modules are deliverable in quantities of 1000 pcs on a reel. The figure below shows the dimensions of reel for GN06-A1.


Figure 9-2 Reel dimensions

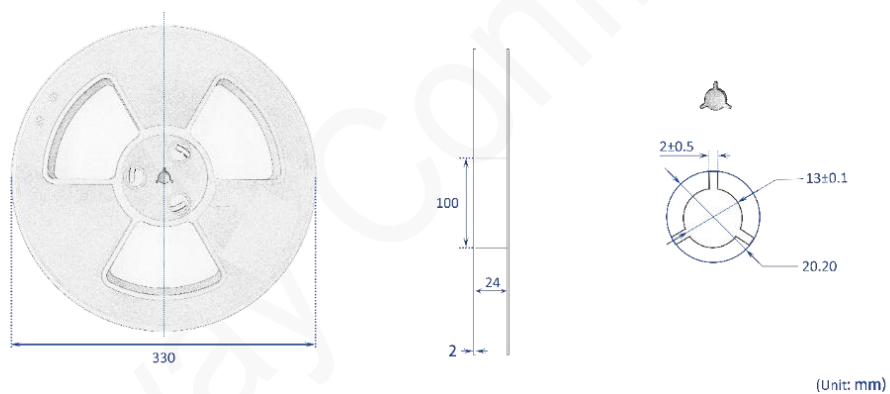

9.1.3 Shipment Packaging

The reels are packed in the sealed bags in a box and shipped by shipping cartons. Up to five boxes (5000 pcs in total) can be packed in one shipping carton.

Figure 9-3 Packaging

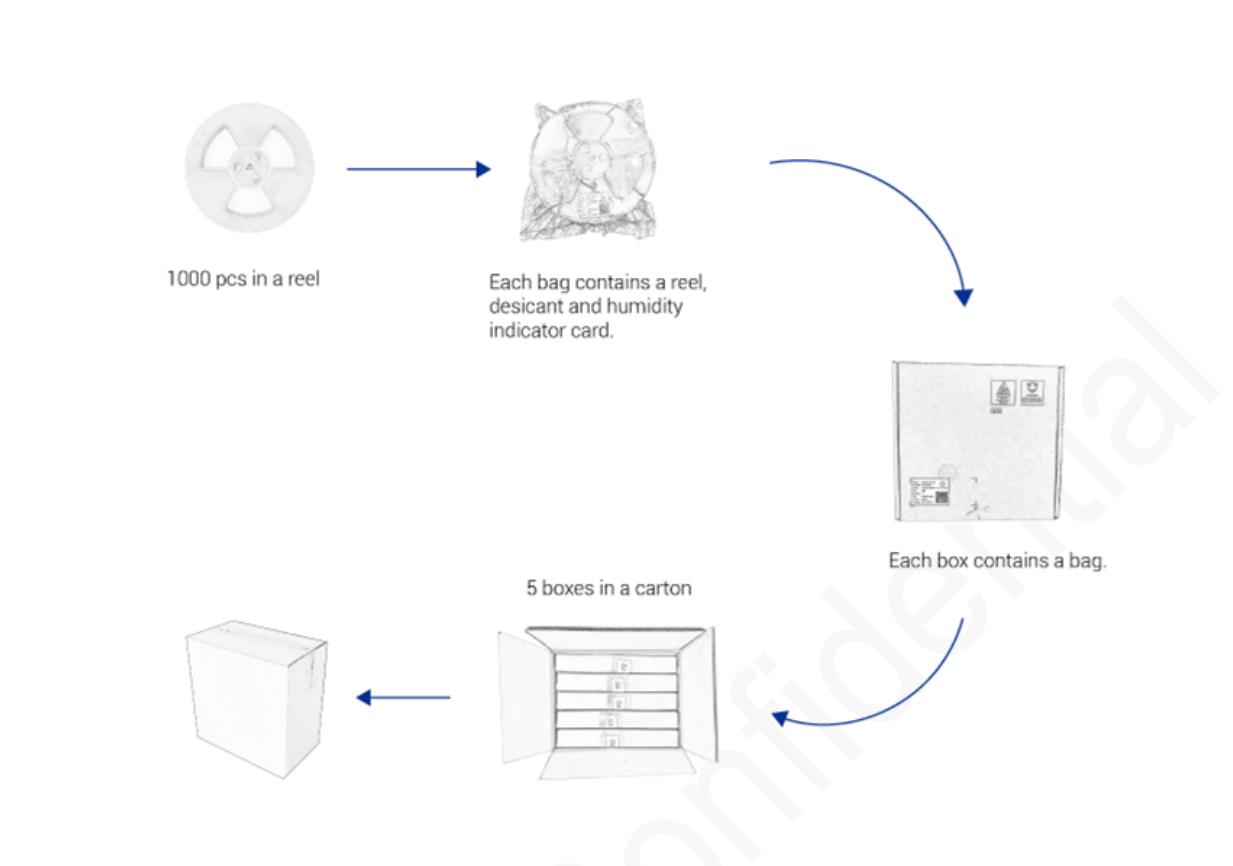

9.2 Storage

In order to prevent moisture intake and protect against electrostatic discharge, GN06-A1 is packaged together with a humidity indicator card and desiccant to absorb humidity.

9.3 ESD Handling

9.3.1 ESD Handling Precautions

GN06-A1 module that contains highly sensitive electronic circuitry is an Electrostatic-sensitive Device (ESD). Observe precautions for handling! Failure to observe these precautions may result in severe damage to the GNSS module!



- Unless there is a galvanic coupling between the local GND (i.e. the workbench) and the PCB GND, then the first point of contact when handling the PCB must always be between the local GND and PCB GND.
- Before mounting an antenna patch, connect ground of the device.
- When handling the RF pin, do not come into contact with any charged capacitors and be careful when contacting materials that can develop charges (e.g. patch antenna ~10 pF, coax cable ~50 - 80 pF/m, soldering iron, ...)

-
- To prevent electrostatic discharge through the RF input, do not touch any exposed antenna area. If there is any risk that such exposed antenna area is touched in non ESD protected work area, implement proper ESD protection measures in the design.
 - When soldering RF connectors and patch antennas to the receiver's RF pin, make sure to use an ESD safe soldering iron (tip).
-

9.3.2 ESD protection measures

The GNSS positioning module is sensitive to static electricity. Whenever handling it, particular care must be exercised to reduce the risk of electrostatic charges. In addition to standard ESD safety practices, the following measures should be taken into account.

- Adds ESD Diodes to the RF input part to prevent electrostatics discharge.
- Do not touch any exposed antenna area.
- Adds ESD Diodes to the UART interface.

9.3.3 Moisture sensitivity level


The Moisture Sensitivity Level (MSL) of the GNSS module is MSL3.

10 Labeling and Ordering Information

Labeling and ordering information help customers get more about Neoway products.

10.1 Labeling

Figure 10-1 Labeling content

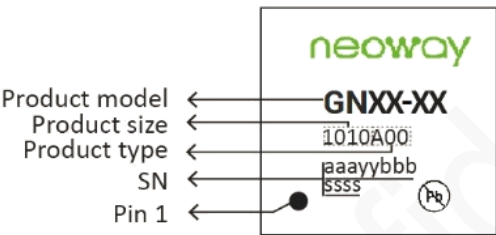

Symbol	Explanation	Instance
GNXX-XX	Product model	GN06-A1
1010A00	1010 represents the product size. A00 means the product type.	1010A00
aaayybbbssss	Serial number	355190010001

10.2 Ordering info

Table 10-1 Ordering codes

Ordering No.	Product information
GN06-A1-1010A00E ^[1]	Concurrent GNSS LCC Module, TCXO, Flash, 10.1*9.7 mm, 1000 pieces/reel.

- [1] See Table 1-1 for the GNSS systems supported.

11 Related Documents

- [1] Recommended Reflow Profile
- [2] Satrack User Manual
- [3] Neoway Common Commands
- [4] GNSS Protocol Specification